 
 
 


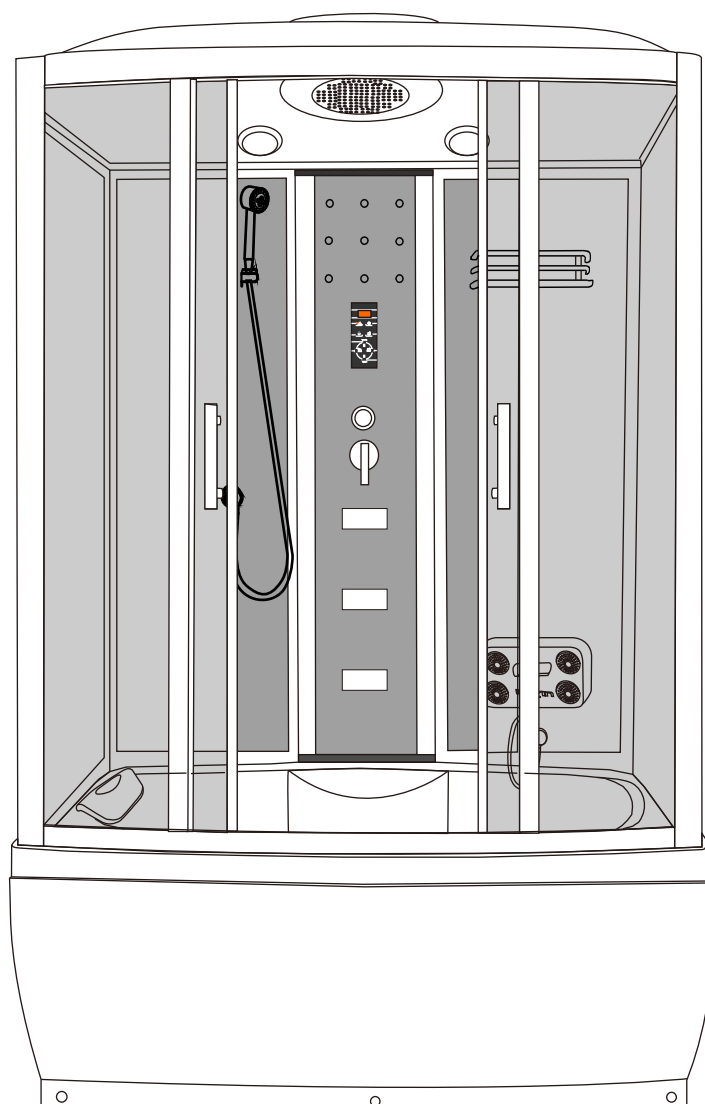




INSTALLATION MANUAL



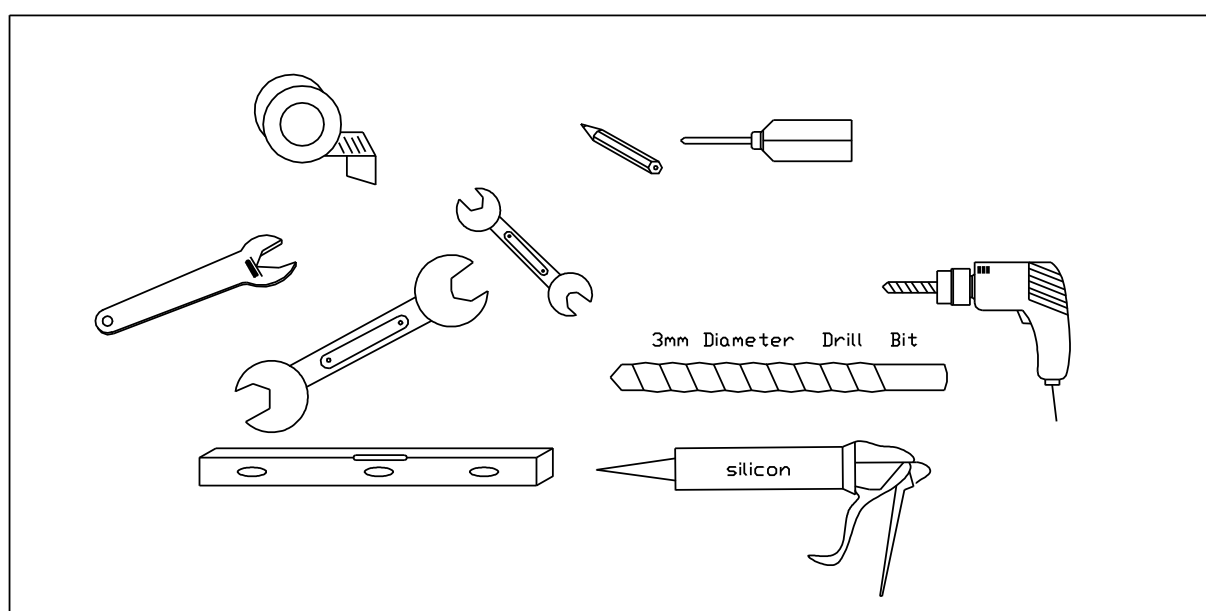


       
 
 
 
 
 
 
 
 
BK-036
1700X880X2180mm

 
 
 
 
 
 
 
 
 
 
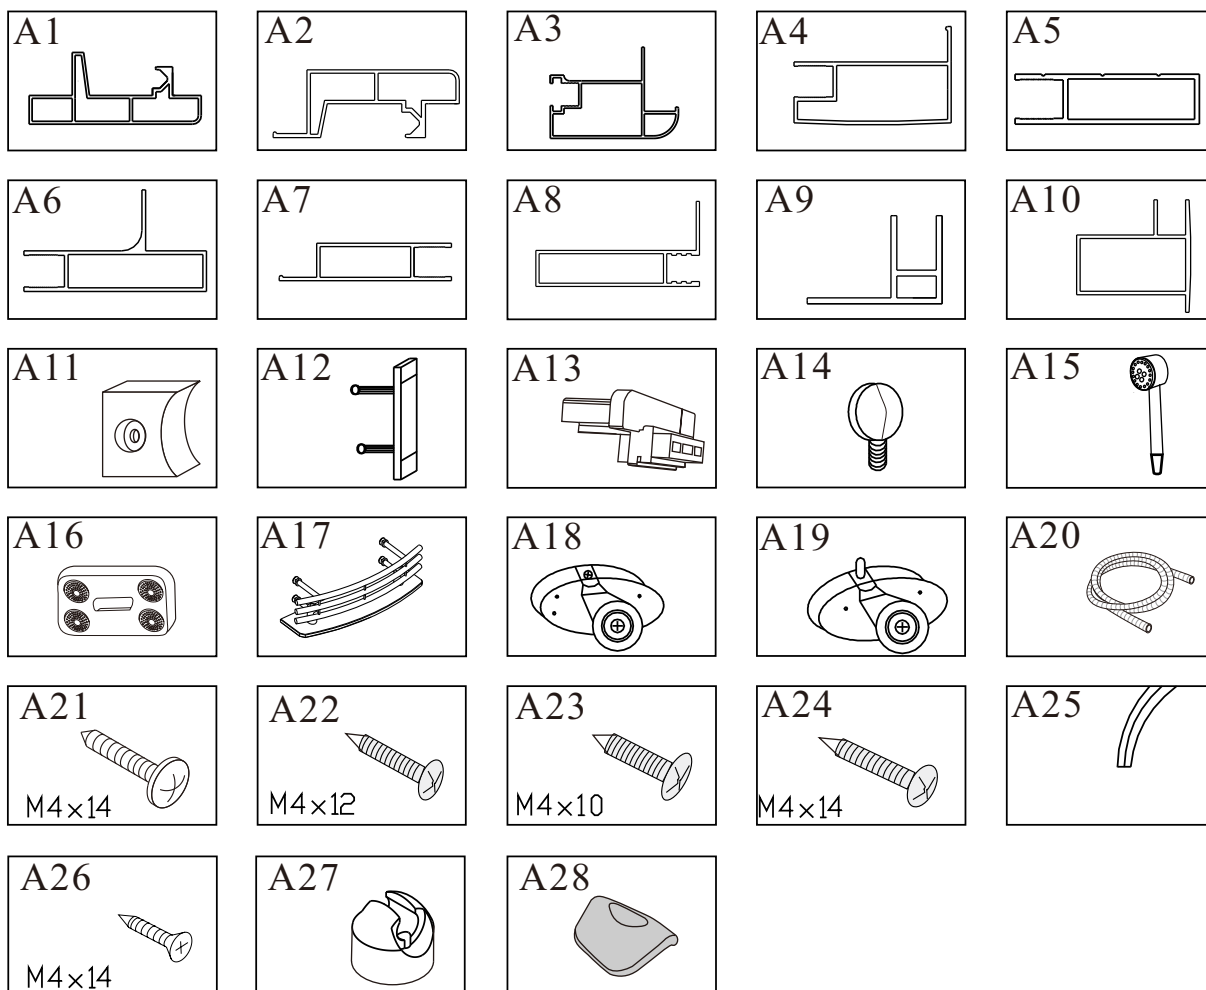 


 
 
 
 
 
 
 
 
 
 
 
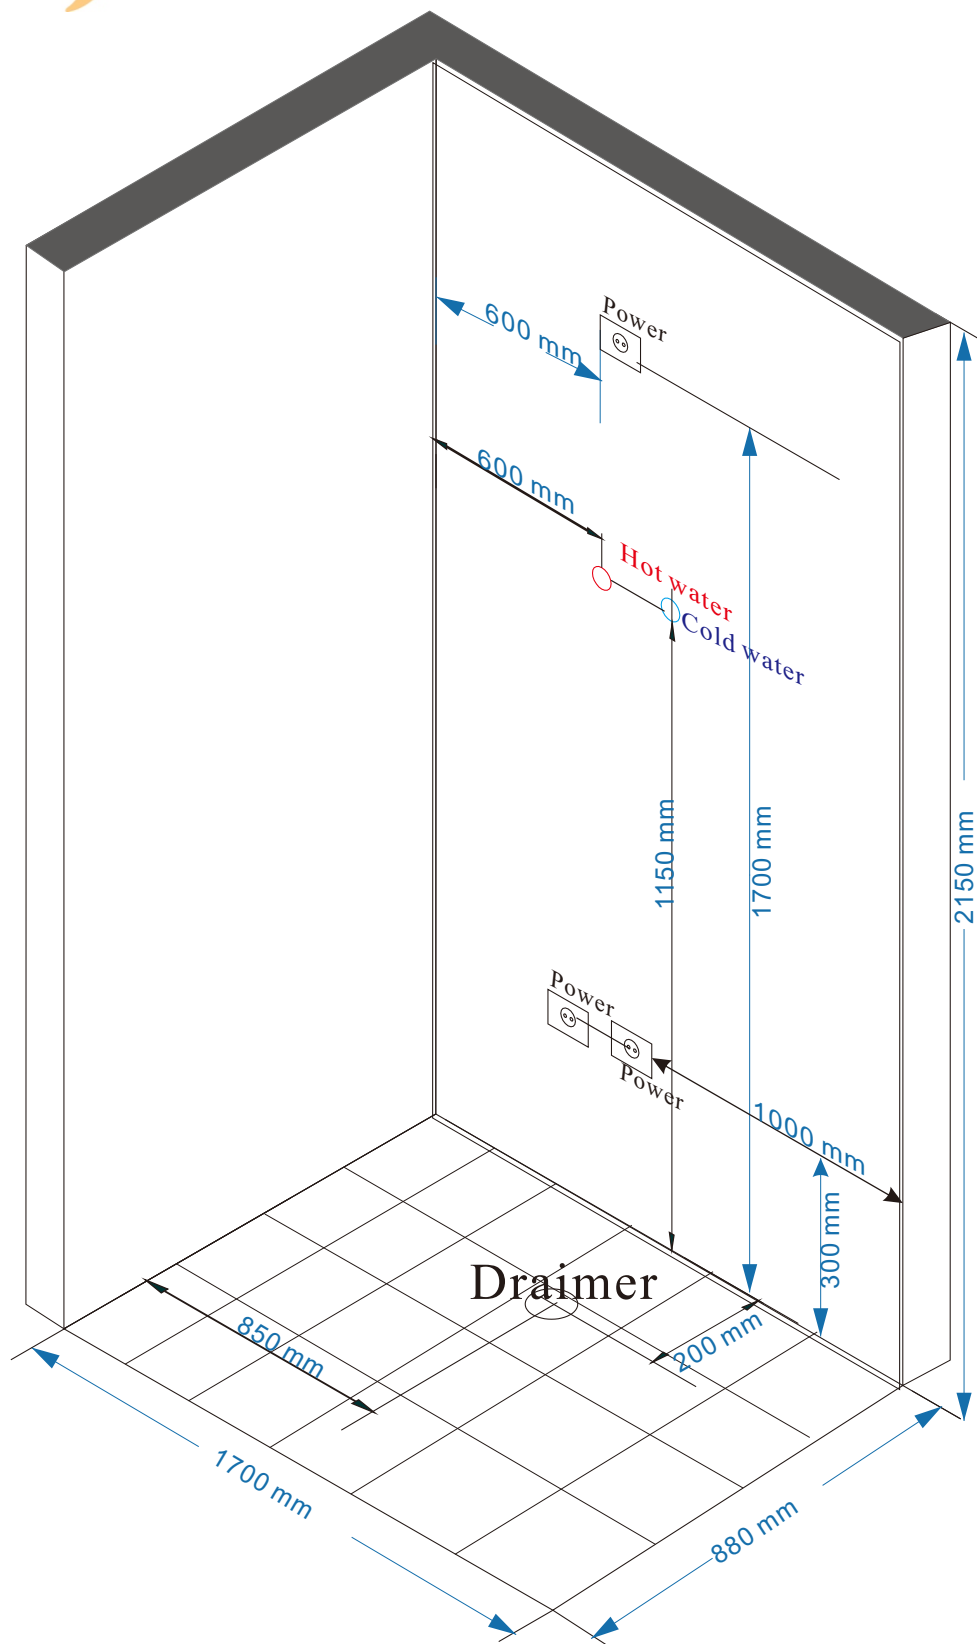 


 
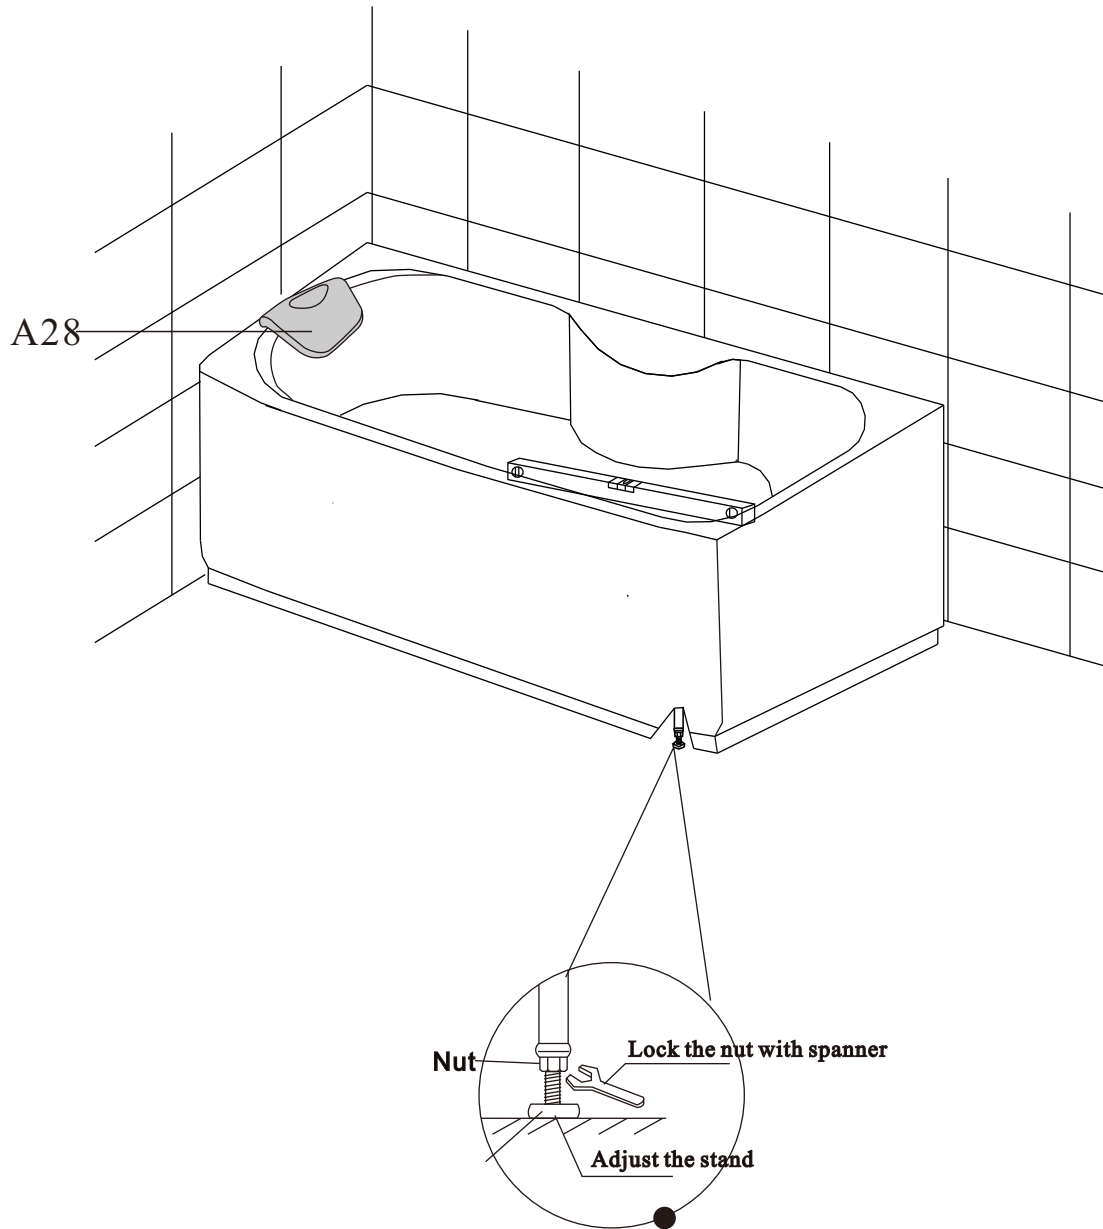 
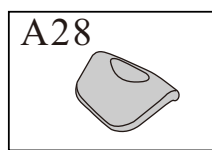 


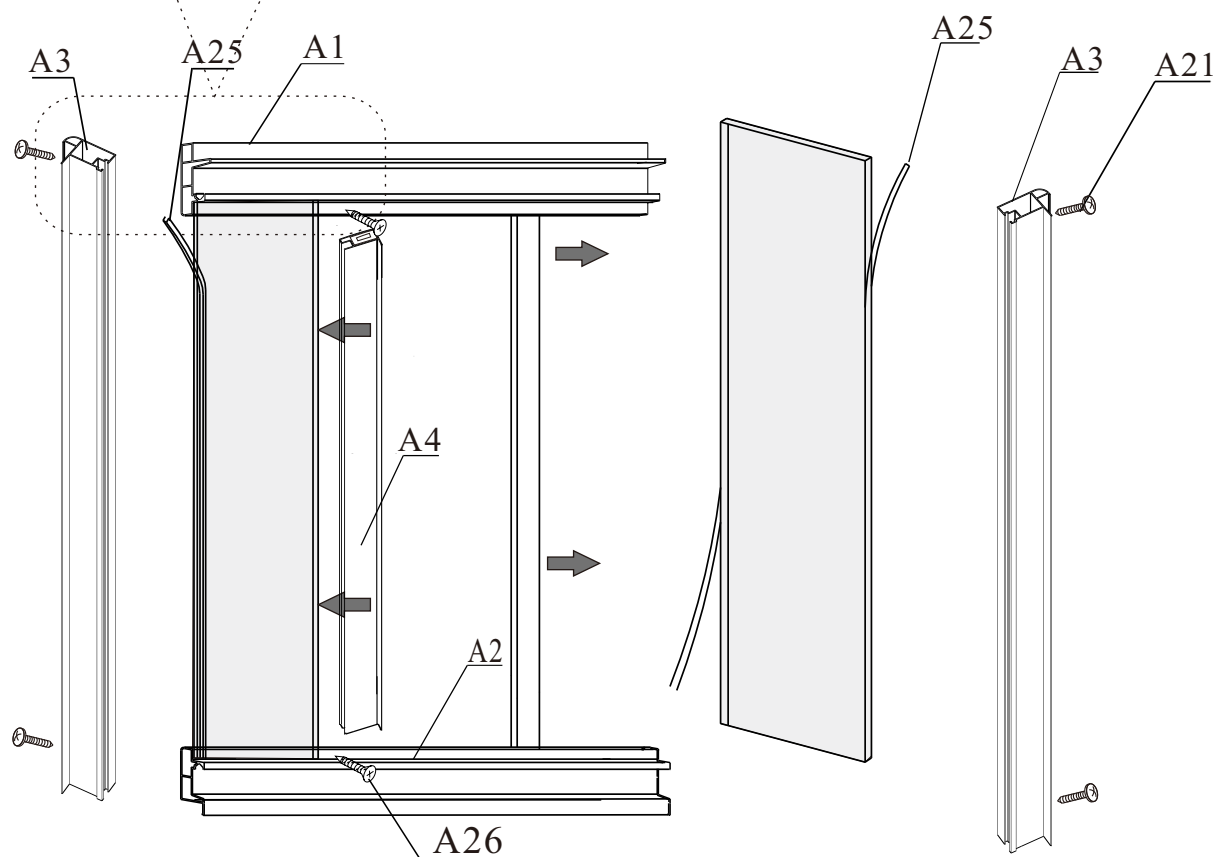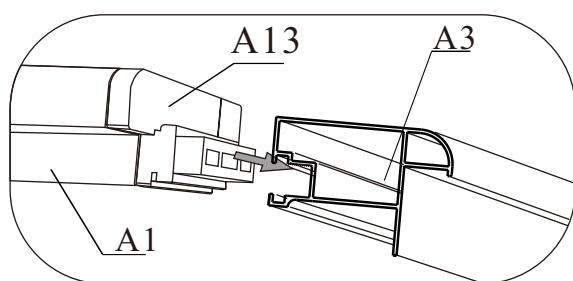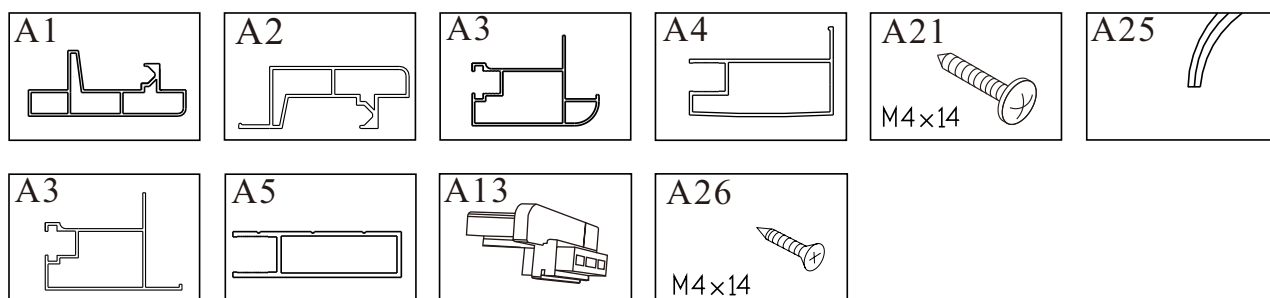 


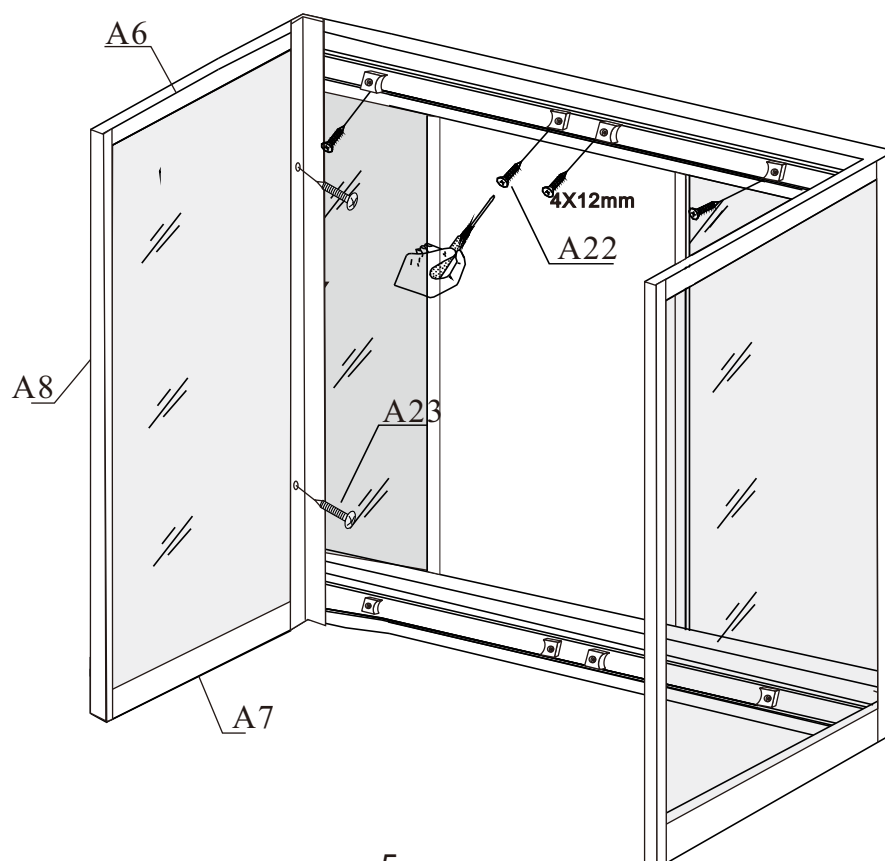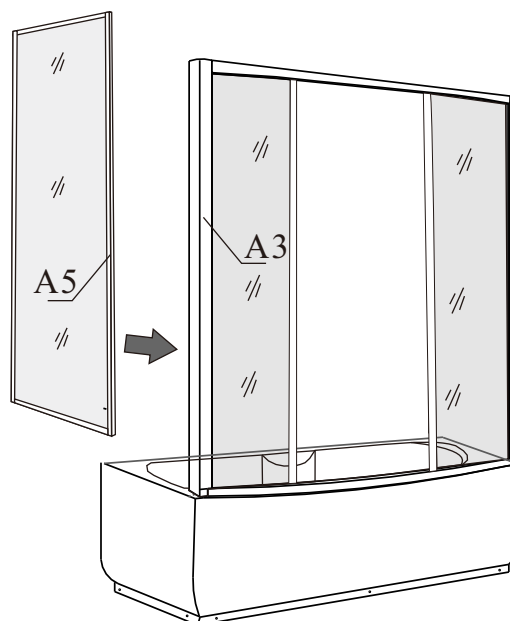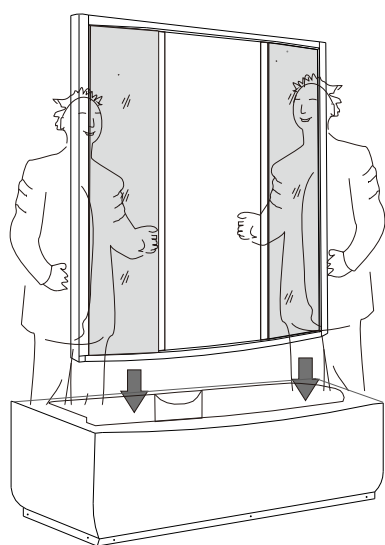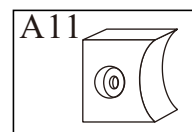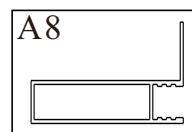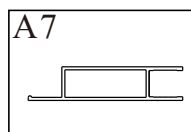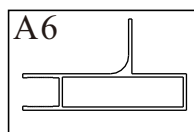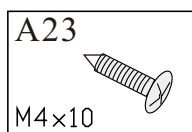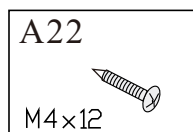

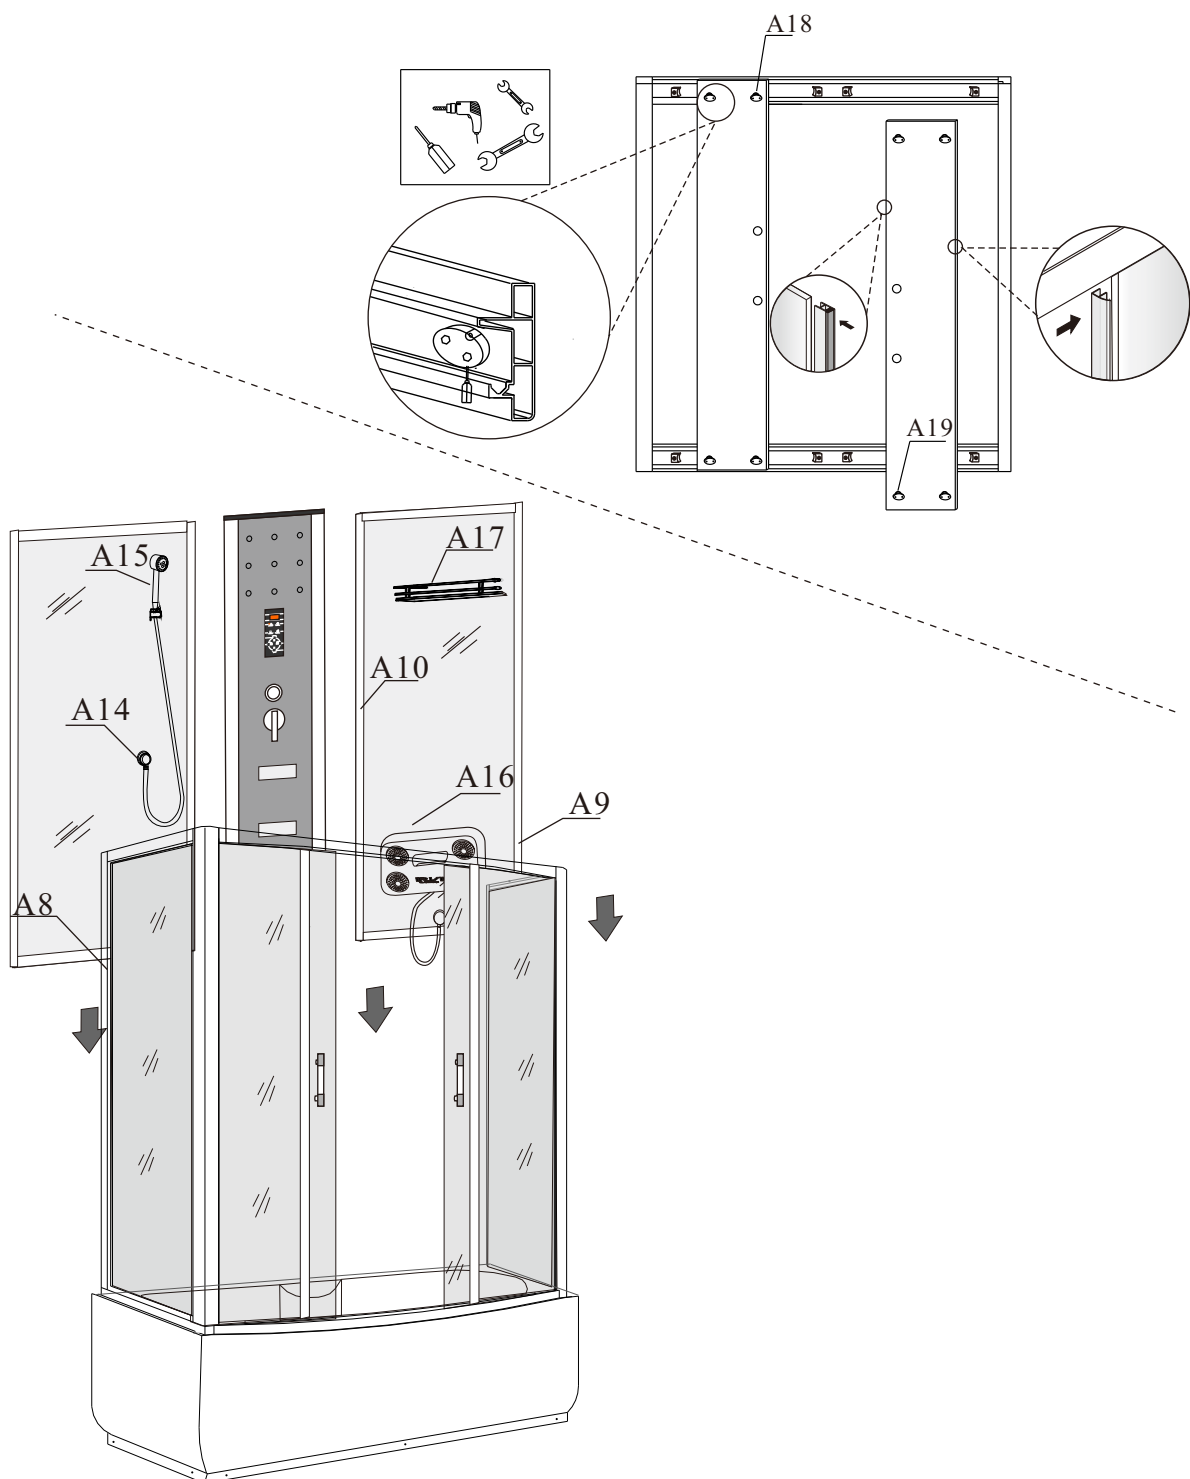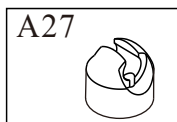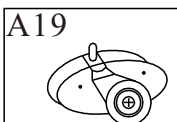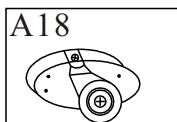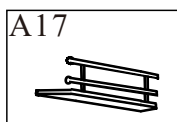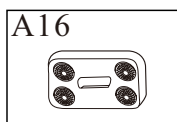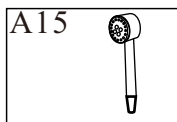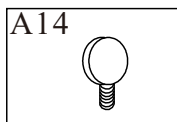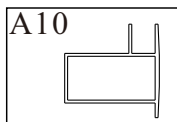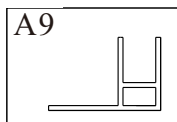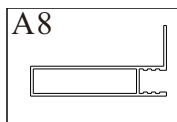

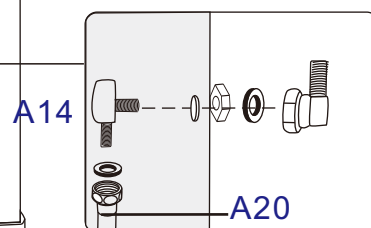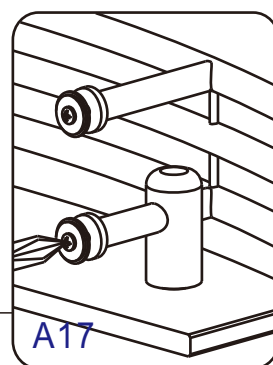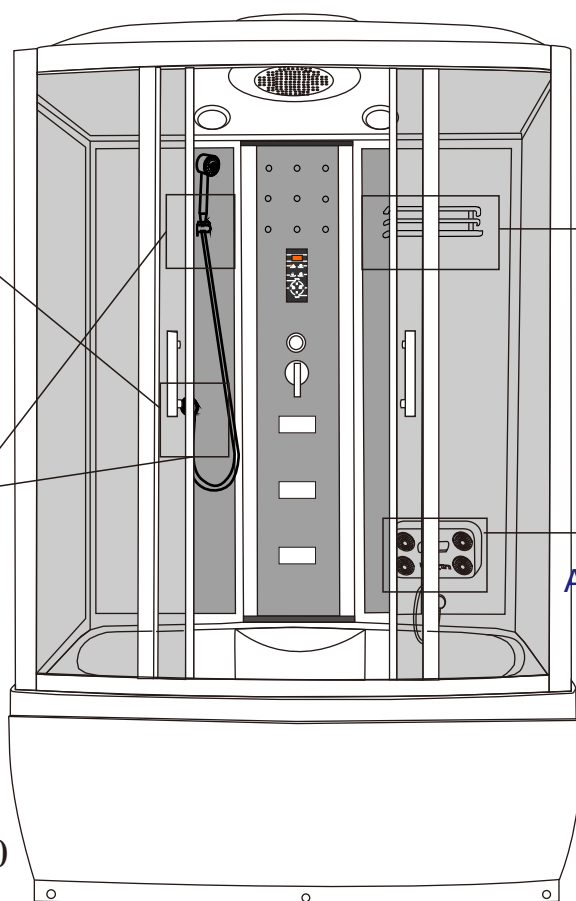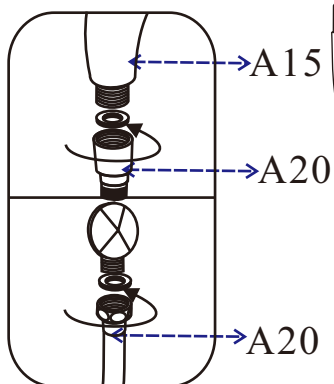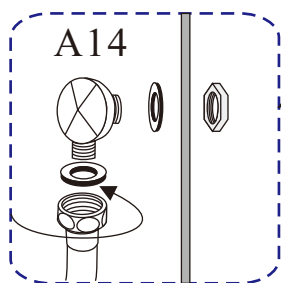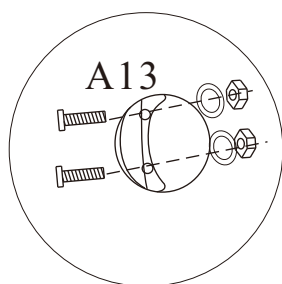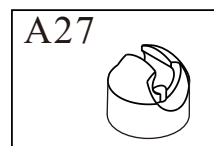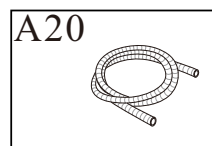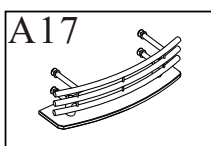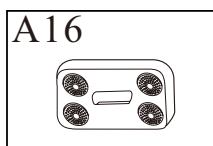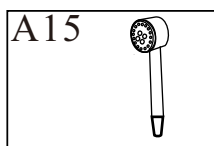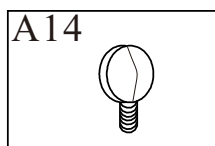

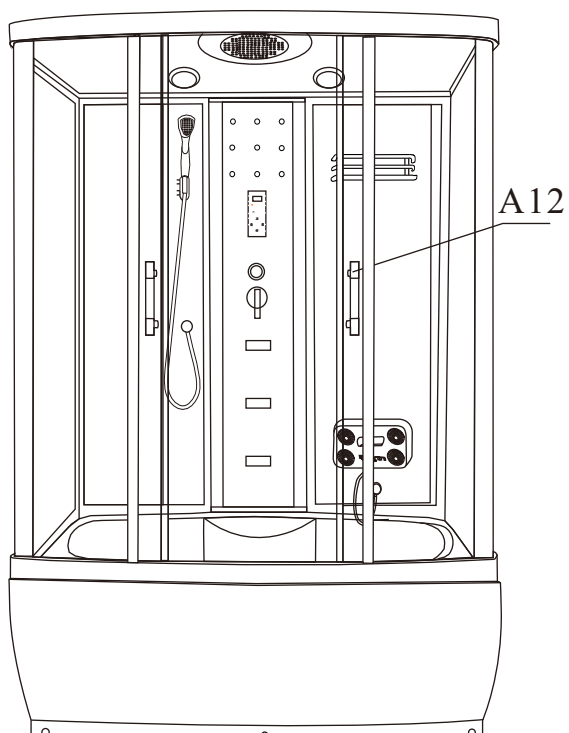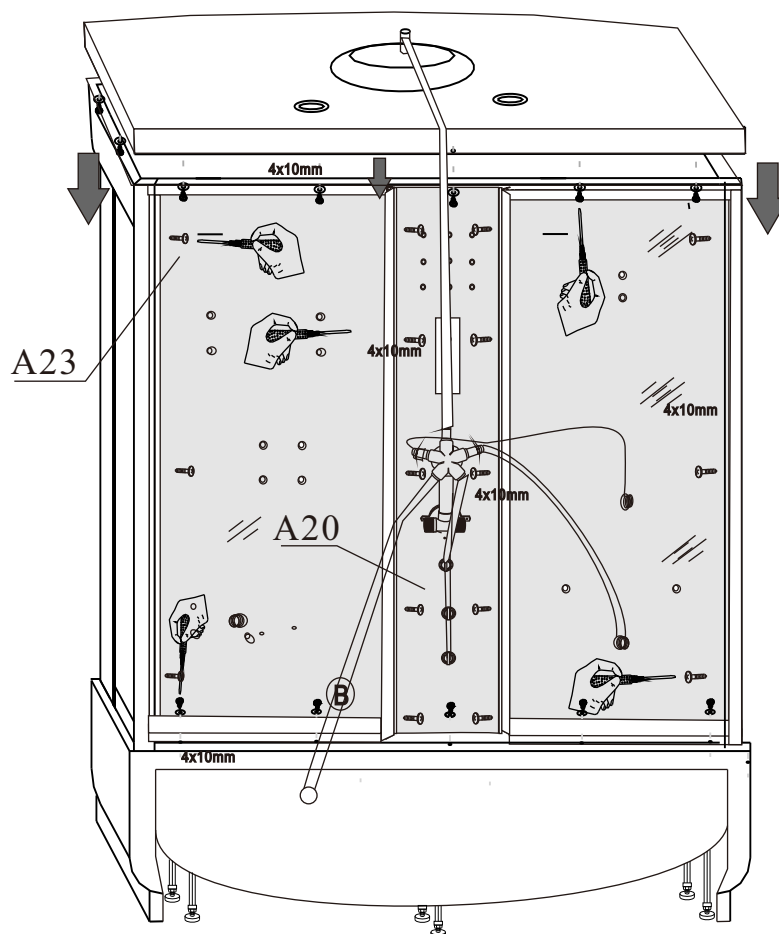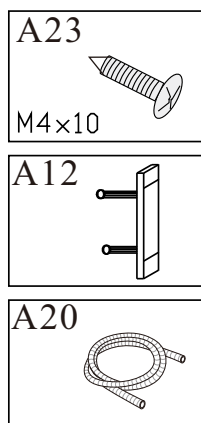

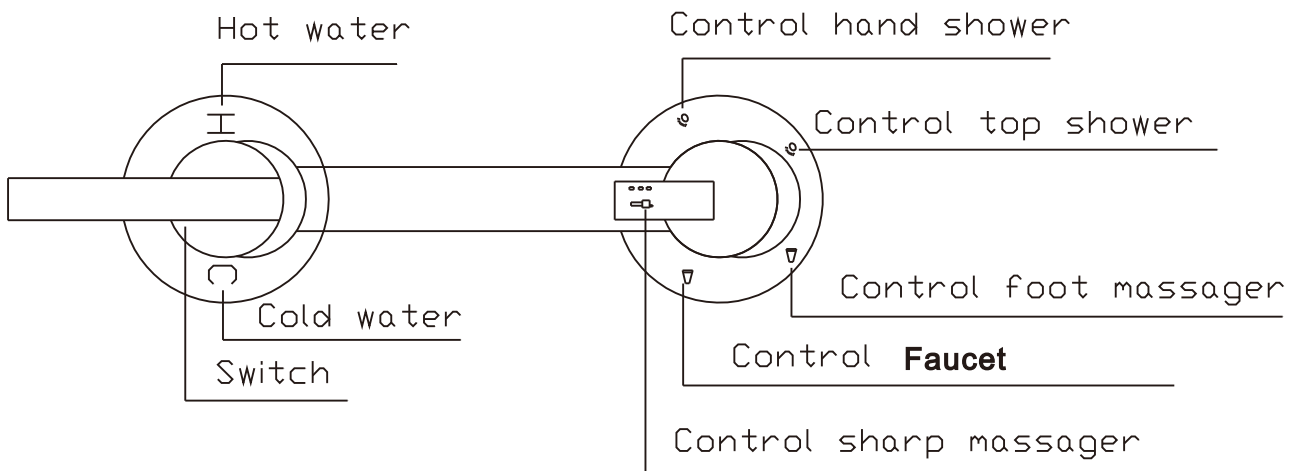

Using instruction for shower room


1. open the switch, it can adjust the hot and cold water by turning into right and left, it is fine when you feel the temperature is ok.
2. Turning the adjuster, it can control water running from the hand shower, foot massager, sharp massager and top shower.
3. The hydraulic pressure is 0.4Mpa in every part.
4. Please turn off the power and switch of the shower room after you used it.
5. Please swab the shower room with soft cloth, it will keep new. The front and back of shower room are high - quality tempered glass, please don't impact it.

Power Request




DXD HEATER

MODEL	SDP-1500 A		
VOLTAGE	220-240VAC	50/60Hz	
POWER	1.5KW	HP	2

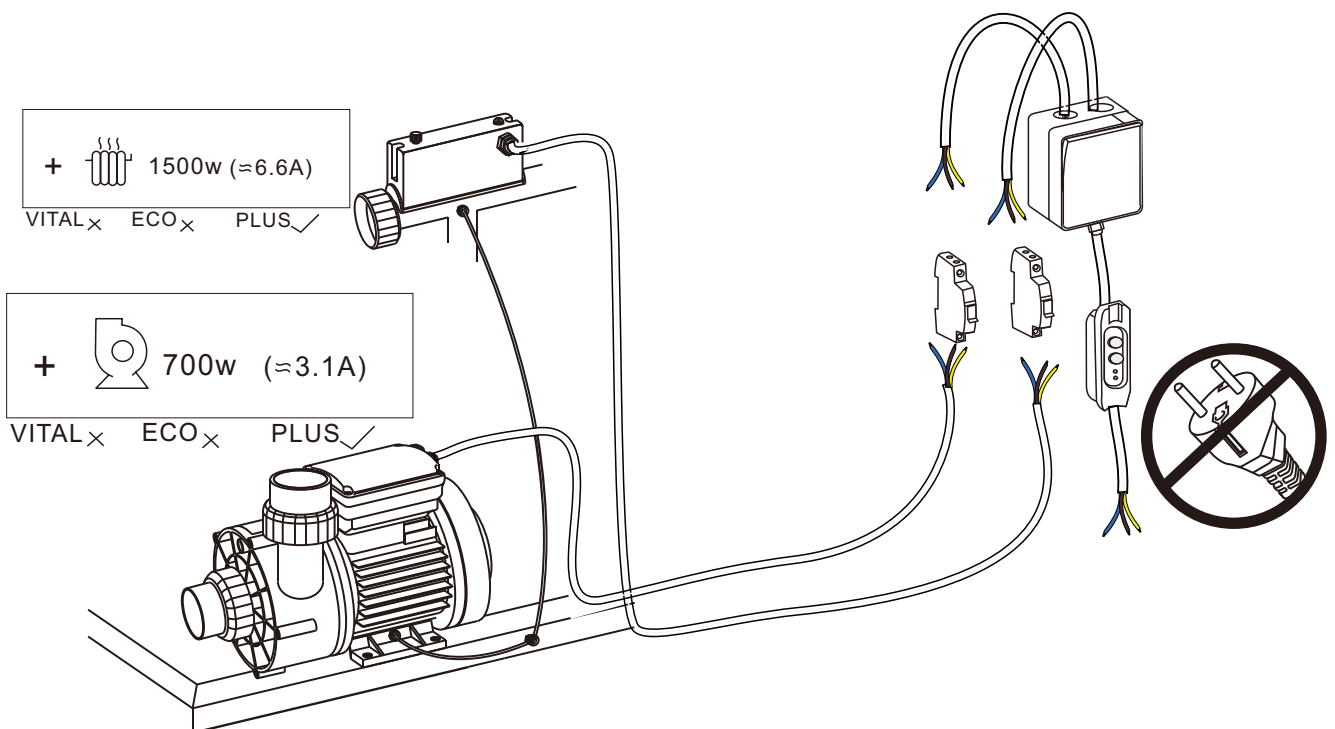 

DXD PUMP

 MODEL DXD-310 A AC 220-240V 50Hz 700W CLASS B IPX5
MAX WATER TEMPERATURE 50C 15u F/450V Hmin 1m

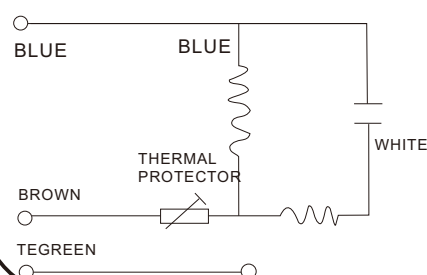

Mround properly!
Do Not Start Pump
Without Water!

