



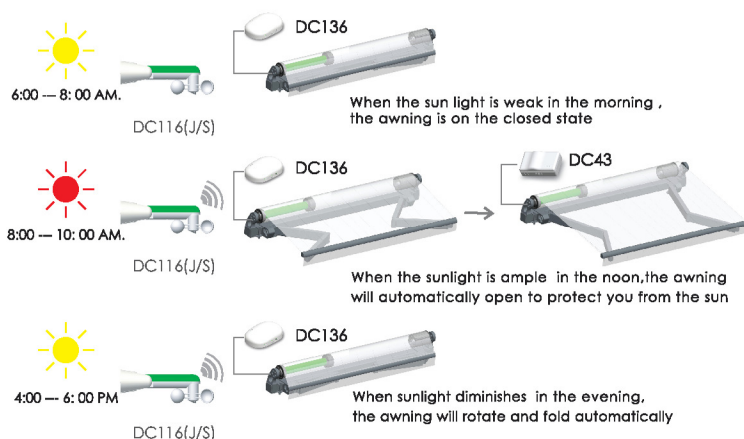

Additional  
Function

## Wind-sun sensor working principle

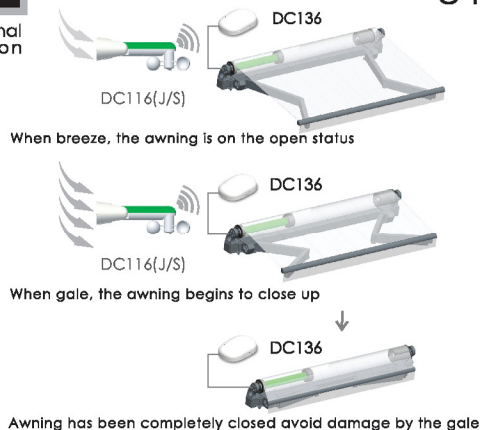

Additional  
Function

## Wind-sun sensor grade adjusting reference

| Wind grade reference |        |
|----------------------|--------|
| 0 / 1 grade          | 15km/h |
| 2 grade              | 30km/h |
| 3 grade              | 45km/h |

The above grades equal to

1: When the grade is "0", "1", the wind reaches over 15Km / h, the awning will fold, LED flashing

2: When the grade is "2", the wind reaches over 30Km / h, the awning will fold, LED flashing

3: When the grade is "3", the wind reaches over 45Km / h, the awning will fold, LED flashing

| Light grade reference |        |
|-----------------------|--------|
| 0 grade               | CLOSE  |
| 1 grade               | 15KLUX |
| 2 grade               | 30KLUX |
| 3 grade               | 45KLUX |
| 4 grade               | 60KLUX |

The above grades equal to

1: When the grade is "0", the light will close

2: When the grade is "1", the light reaches over 15 KLUX, the awning will open, LED flashing

3: When the grade is "2", the light reaches over 30 KLUX, the awning will open, LED flashing

4: When the grade is "3", the light reaches over 45 KLUX, the awning will open, LED flashing

5: When the grade is "4", the light reaches over 60 KLUX, the awning will open, LED flashing




Additional  
Function

## Matchable R/E/ED Tubular Motor Set up

The interval of different button must within 6 seconds for all setting, otherwise the system will restore the original state

One receiver store 20 emitters channels at most, and one channel of emitter can control 20 receivers at most

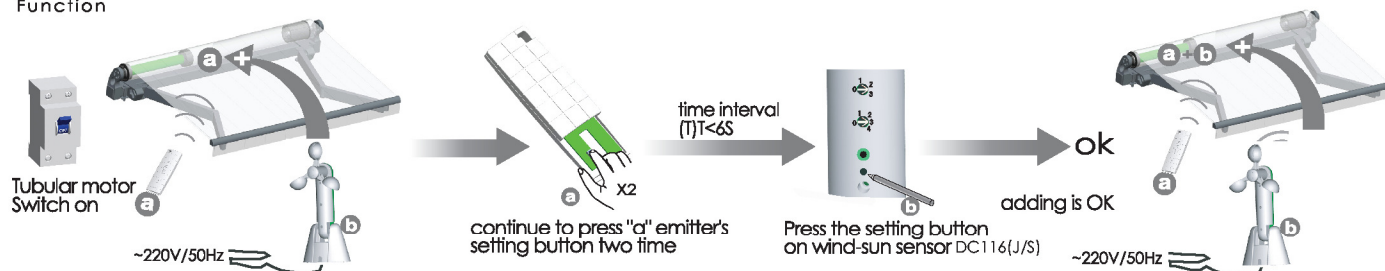


Additional  
Function

## Matchable DC43 Set up

The interval of different button must within 10 seconds for all setting, otherwise the system will restore the original state

One receiver store 20 emitters channels at most, and one channel of emitter can control 20 receivers at most

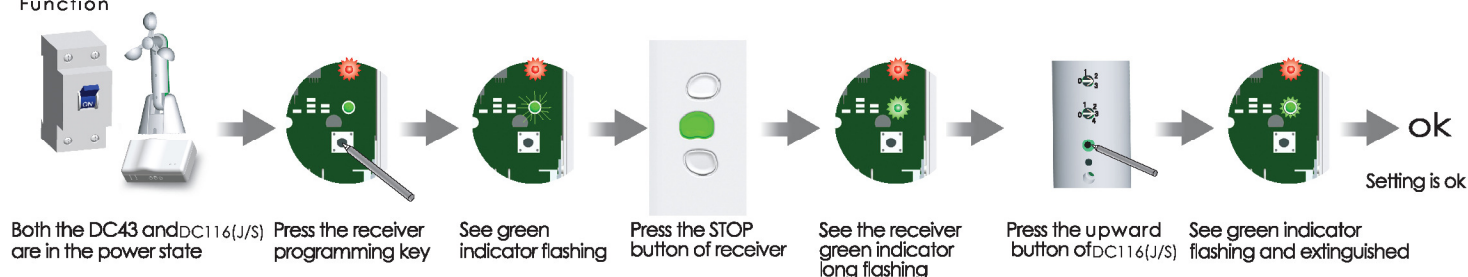


Additional  
Function

## Matchable DC136 Set up

The interval of different button must within 10 seconds for all setting, otherwise the system will restore the original state

One receiver store 20 emitters channels at most, and one channel of emitter can control 20 receivers at most

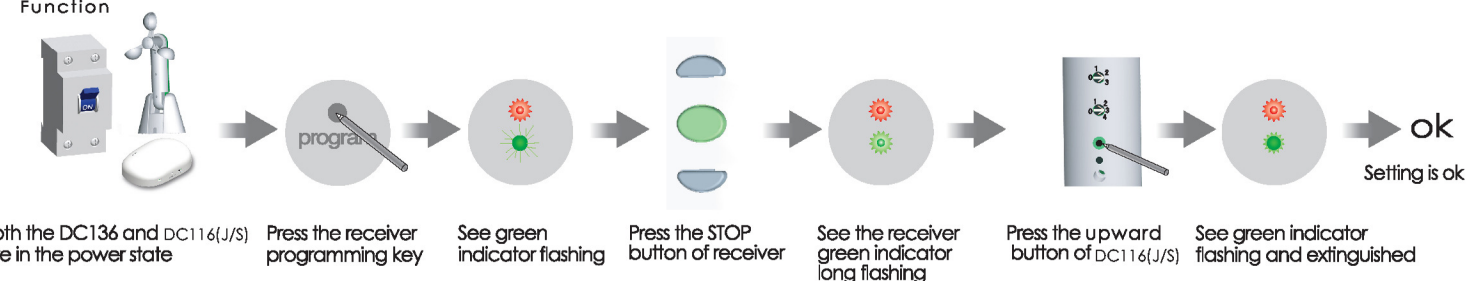




All controls support 433MHz & 868MHz

# Control System

## Wind-sun sensor Specification

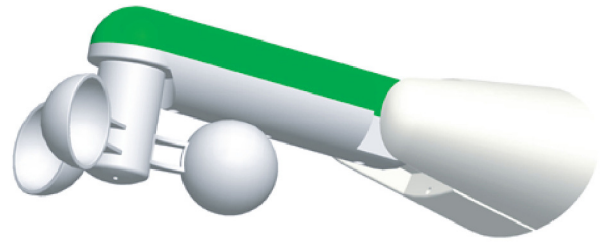


Version No. : A/04



Technical Support

### Wind-sun sensor specification

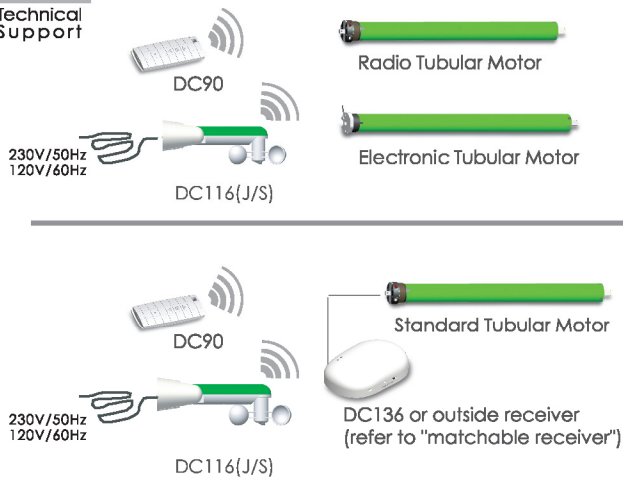

- Stable performance
- Wireless
- Frequency : 433.92MHz
- Range of validity : outdoor 200 meters
- 2 screws fixed
- AC power : input 230V~50Hz
- Safety code (50 million times without repeat, high security)
- Can set three different wind scales and four different sunlight ranks
- When the wind power is more than the setting value for 3 seconds, the sensor will automatically close awning. After closed, the sensor will not the wind in one minute.
- When the light level is more than the setting value for two minutes, the sensor will automatically unfolds awning. When the light level does not reach the setting value for 15 minutes, the sensor will automatically close awning.


**Note 1:** Make sure to confirm that sensor has been programmed with the supporting receiver before use.

**Note 2:** Make sure that the upward button on the transmitter will make the awning close before use.



Technical Support


### Matchable receiver

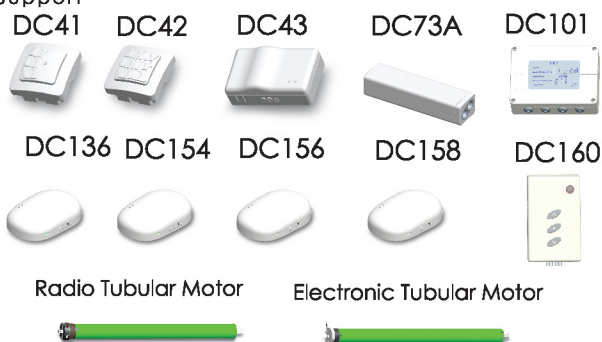

### Button specification



DC116J adjust wind level to 0, only have Light sensing function DC116(S) do not have this function

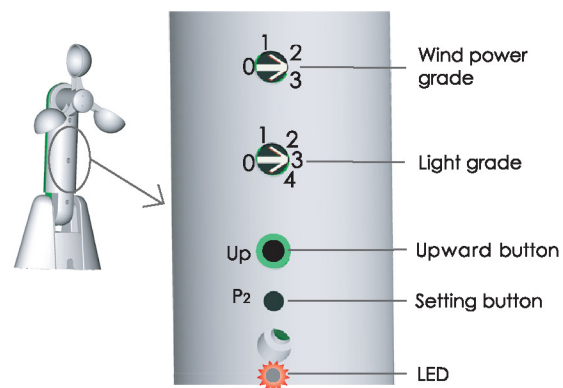

Technical

### The best installation position



If wants to change the installation site, it needs open the power junction box, loosen the fixed screw. After adjusting the installation site, tighten the screws up.

