









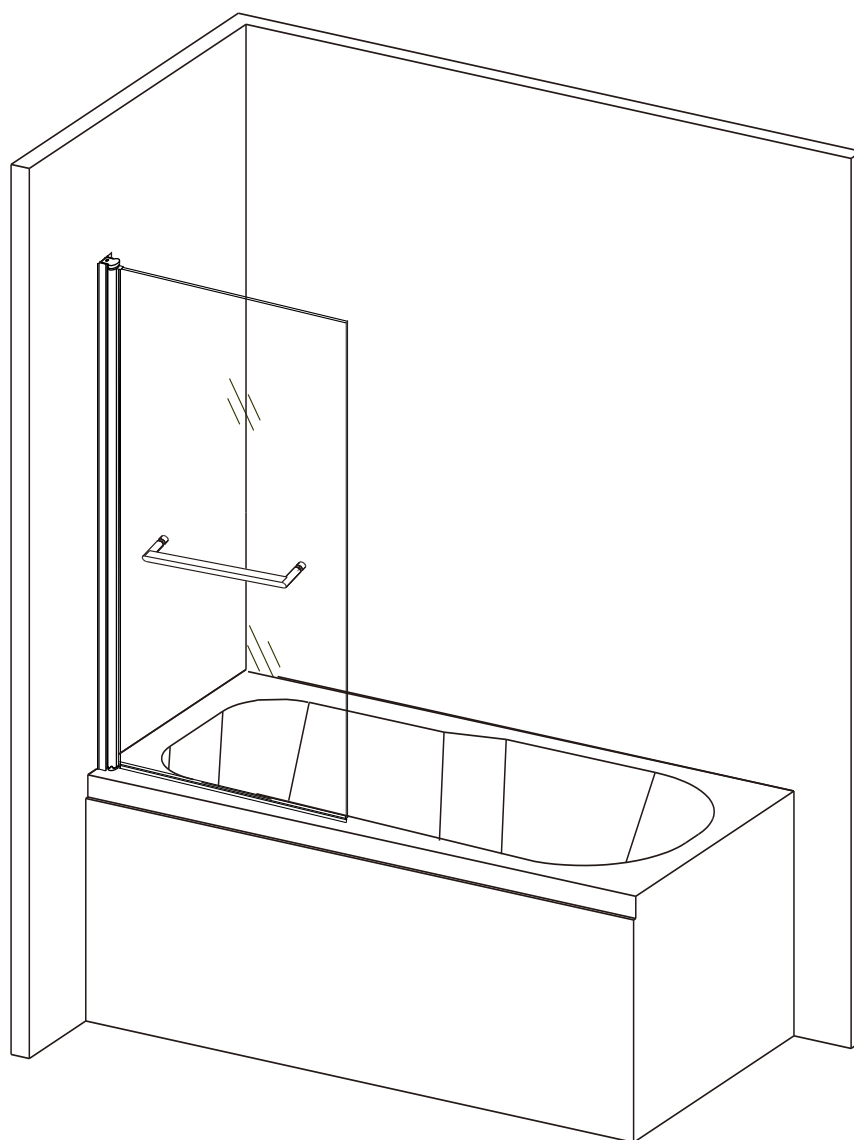






Luxury Shower Screen




BK017

1500x800 mm

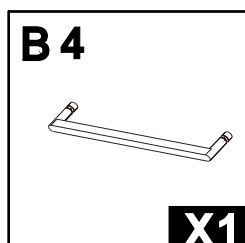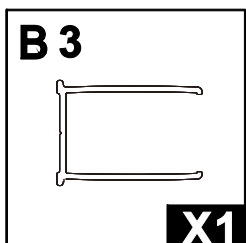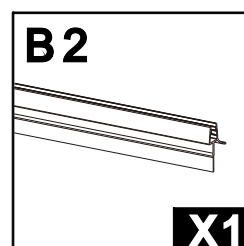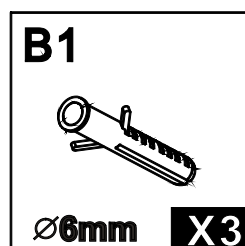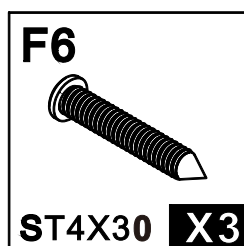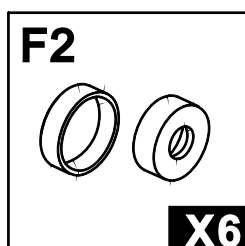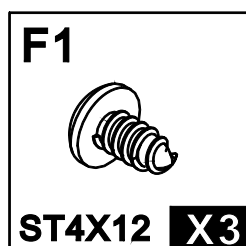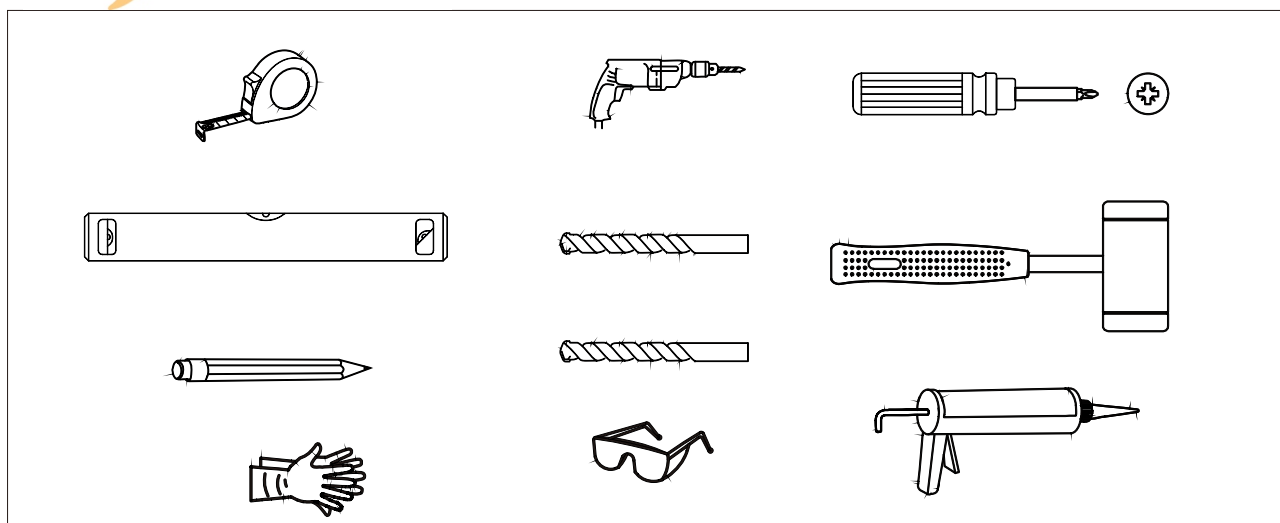


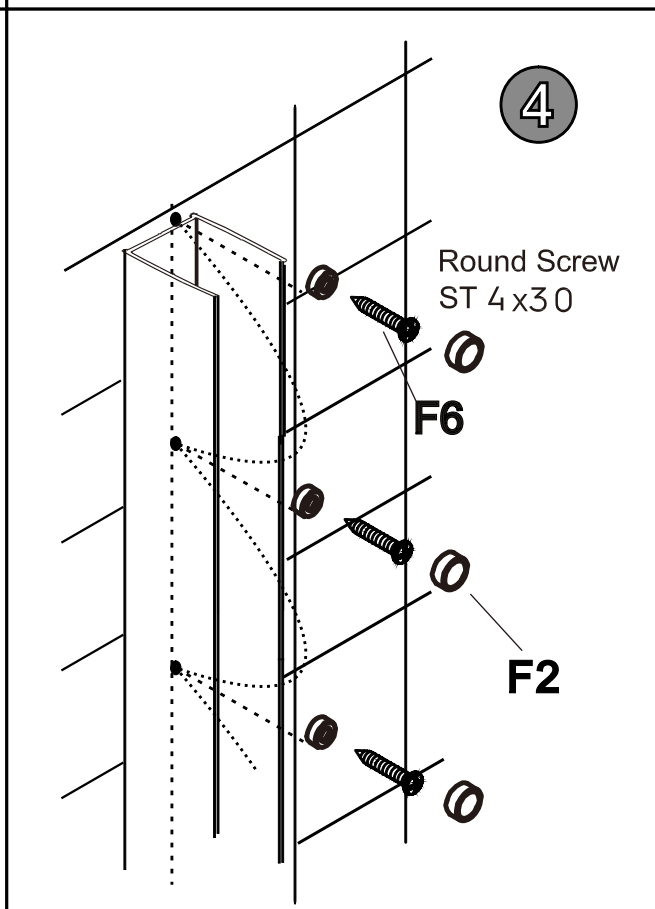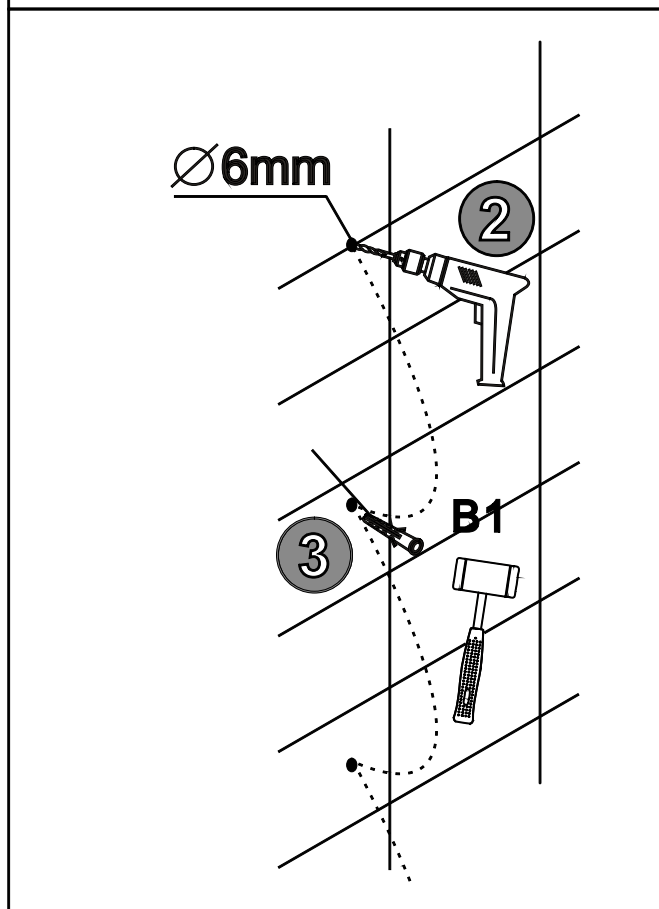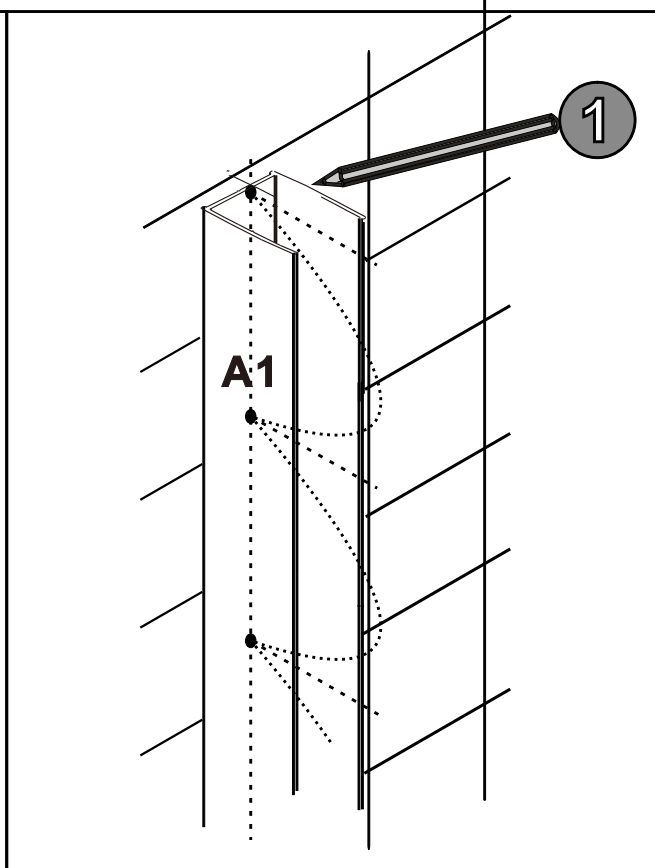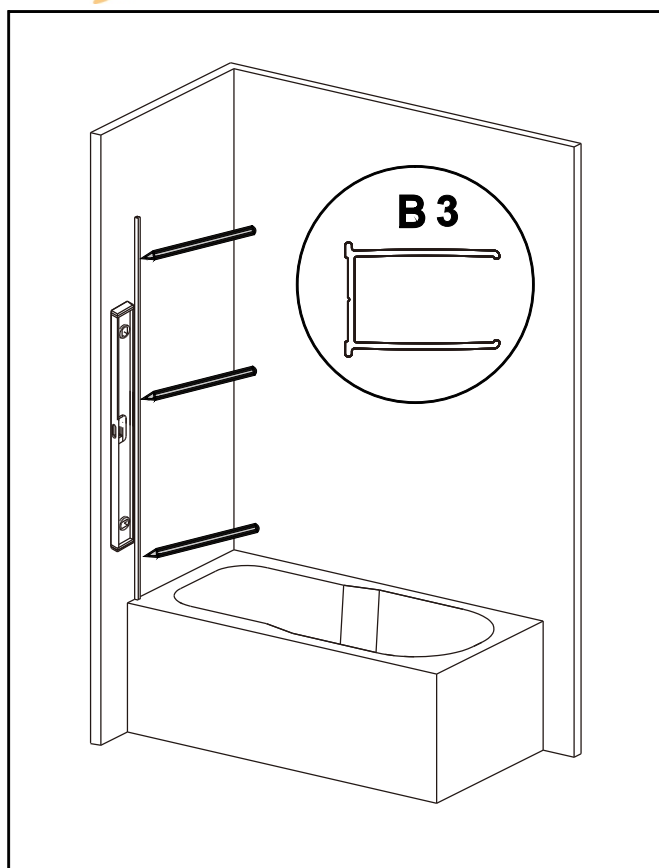


1 Gently squeeze the frame
into the wall post

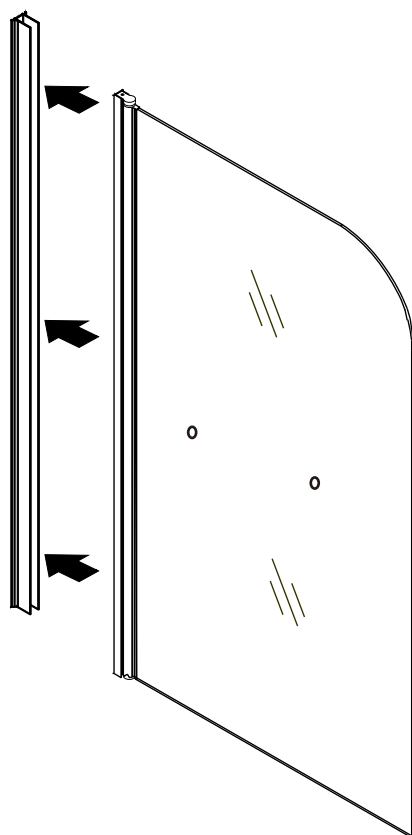


2

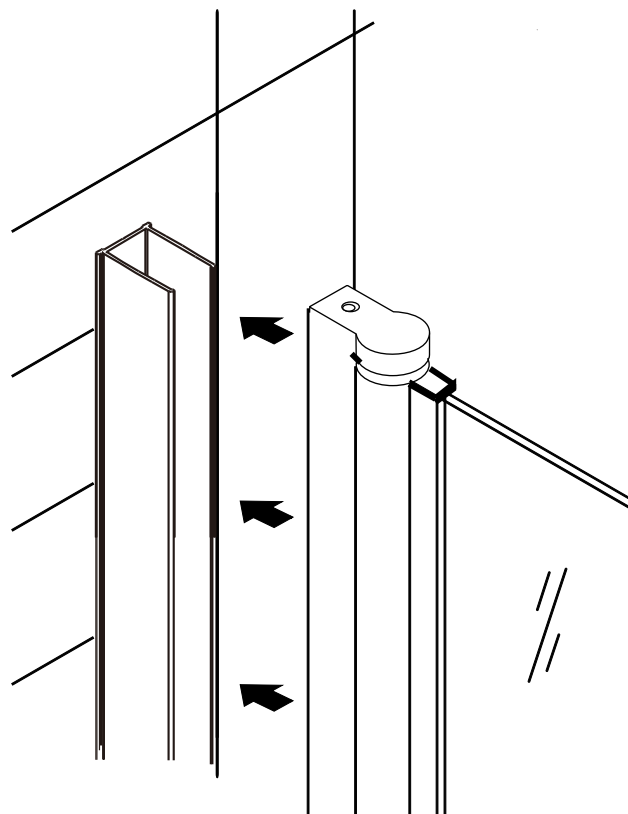


3

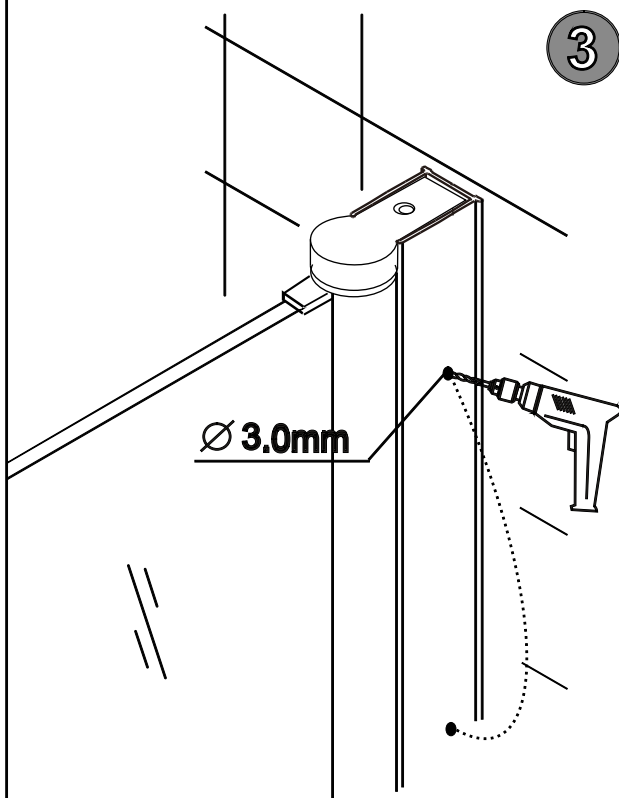

4

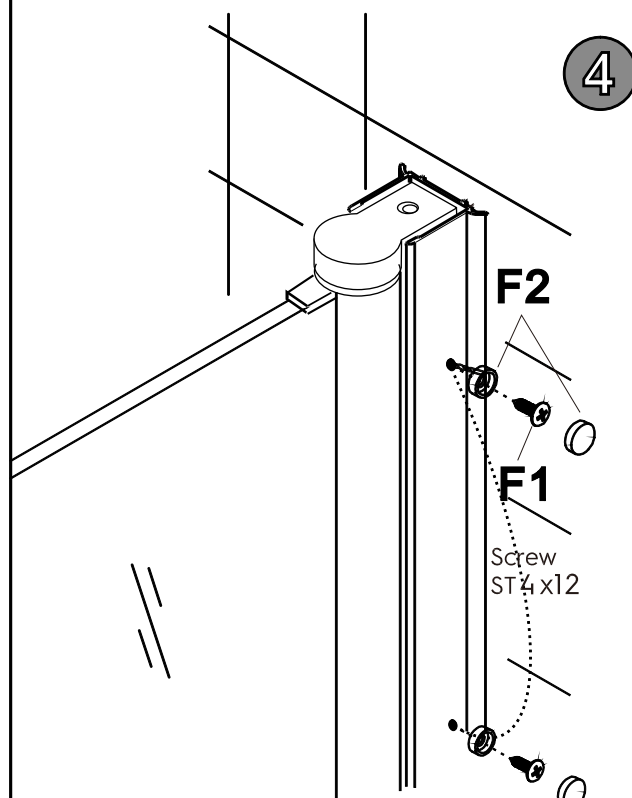

APPLY SILICONE TO THE OUTSIDE EDGE OF
THE WALL PROFILE ONLY

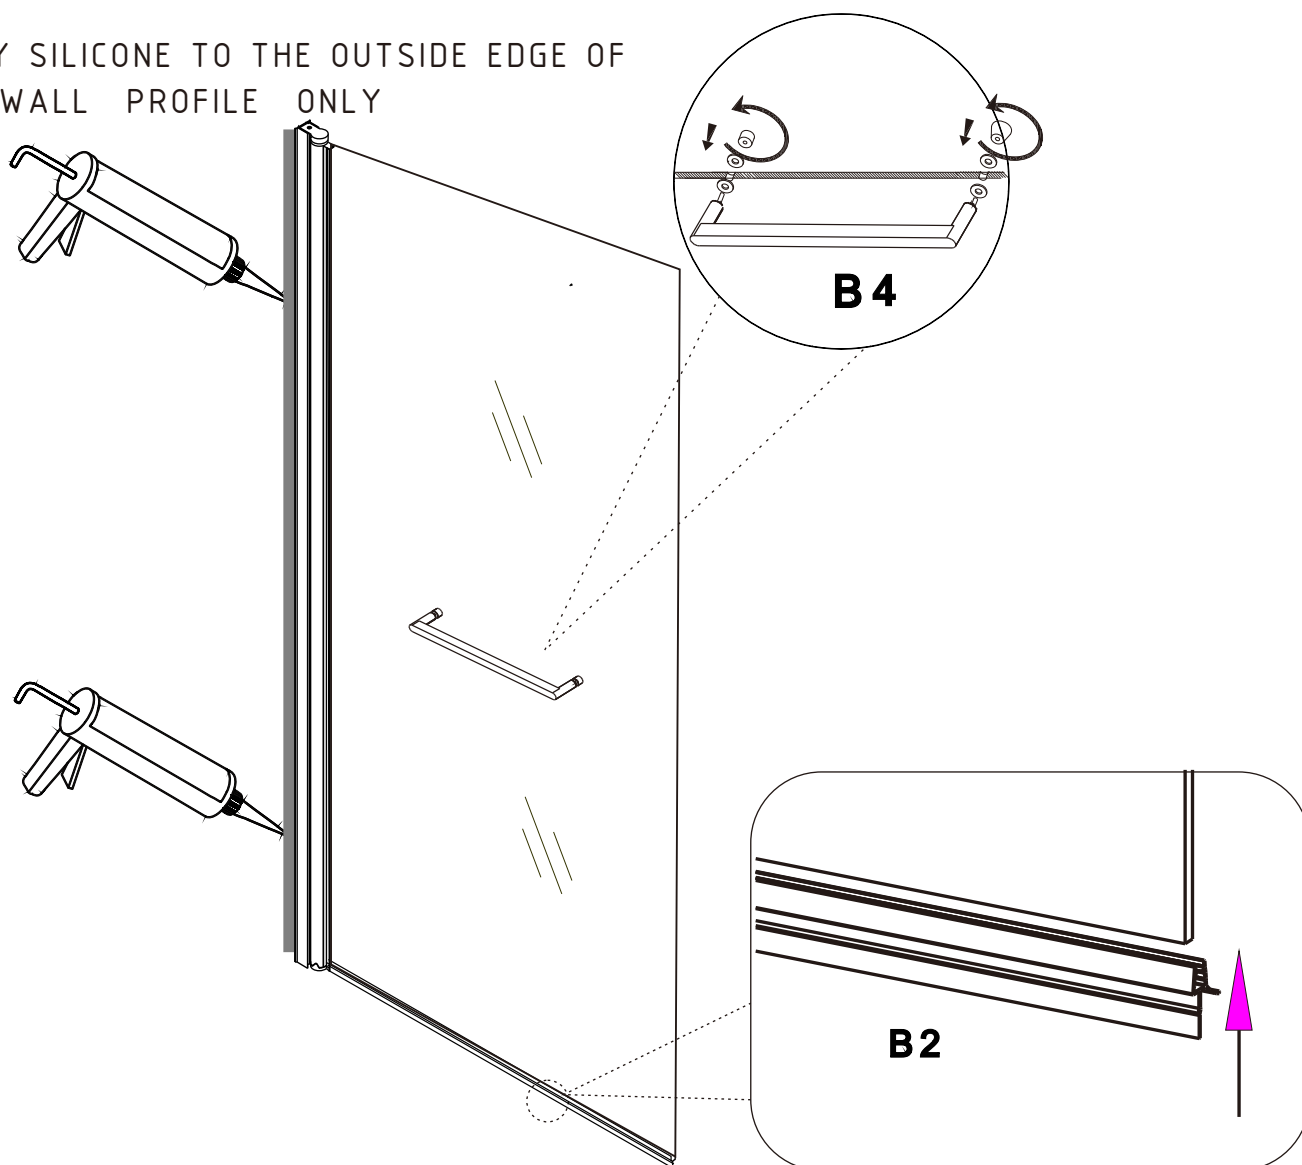

FIX THE BOTTOM SEAL TO
THE PIVOT GLASS PANEL